

INSTRUCTIONS

Setup

1. Select a sheltered level campsite free from sticks, rocks and roots. Make sure it is well drained. Always look overhead for any dangerous branches that could fall during the night. Try and avoid camping at the base of a cliff.
2. Unpack and separate the contents of the carry bag.
3. Assemble the poles- There are 2 Red poles for the inner, there is one Silver pole for the vestibules
4. Peg out the inner tent using the peg down points, checking the floor is of an even tension without wrinkles.
5. Starting on the door side of the tent, take one Red pole and place pole tips into the locator holes on the webbing straps on the corners of the inner tent, beside the door. Repeat this on the opposite long side.
Over lap the poles above the inner tent so they cross over above the short ends of the inner tent
The tent will stand up during this process, whilst attaching the clips sewn to the inner onto the poles
Next Place the silver pole across the tent roof, so it ends above the doors, secure pole tips to eyelet sewn on webbing above the door.
6. Now select the fly and open out flat. Note that there are Velcro tabs on the inside of the fly. Place the fly over the inner tent. Inside the fly wrap the Velcro tabs around the poles and press the tabs together. Hook the buckle over the hook on the plastic pole keepers on all four corners, then peg out the vestibules on each long side.
Adjust the tension on the fly to ensure its taught. Do not over tension.
7. Peg out all remaining anchor points and all guy ropes firmly for weatherproof security.



Disassembly

Simply reverse the above process.

Repack into carry bag

1. Lay out the Fly in a roughly rectangular shape.
2. Fold it towards the centre along the long axis until the width of the folded rectangle is equal to length to the folded poles in their carry bag.
3. Repeat step 2 for the inner tent.
4. Place the folded fly on top of the folded inner tent and using the poles in their carry bag as a rolling pin, roll up the tent and fly around the poles.
5. Pack into carry bag. It may be necessary to repeat step 4 to remove enough air to easily fit into carry bag.

Prolonging the life of your Denali tent

Lightweight tents are portable, temporary shelters avoid leaving in the sun for prolonged periods.

Inspect your camp site and clear any objects that could damage your tent floor.

Always air your tent until it is totally dry after your trip. Never pack it away when damp or dirty.

Use mild soap and water to clean tent and fly.

After beach use or wet conditions treat all zips, poles and pegs with silicone spray.